

EdDozer

EdEngineering – Pack 1

 


Available from

MyBrick.com.au


Edison and LEGO compatibility

LEGO bricks can be attached to the top and bottom of the Edison robot and LEGO pegs can be attached on the sides. There are three types of holes on the side of Edison:

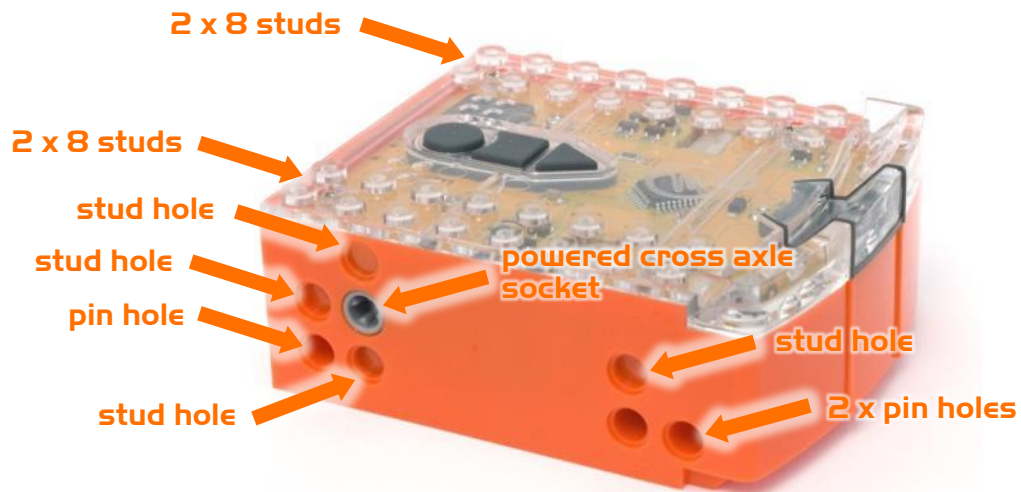

Edison's side and top LEGO connections

Hole type	Description	Connects to
Pin hole	Full depth for connecting pegs	
Stud hole	Normal stud depth can be used for half pegs	
Cross axle	Powered output that rotates	

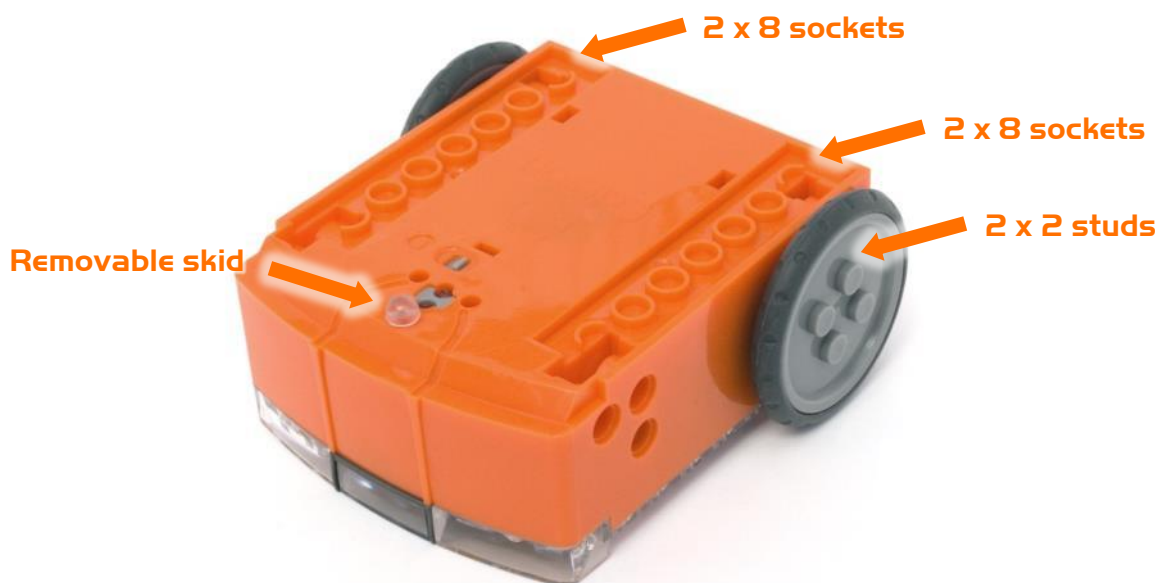 

Edison's bottom and wheel LEGO connections

Program EdDozer's Front Blade

Drive the top Edison over the following barcodes. Use buttons that correspond well with blade up and blade down on the remote control, but don't use the buttons that you want to drive the EdDozer with. See suggested button arrangement below, although your remote control will likely be different.

Reading the barcode

1. Place Edison facing the barcode on the right side
2. Press the record (round) button 3 times
3. Edison will drive forward and scan the barcode
4. Press a button on your TV/DVD remote that you want to activate that function



Barcode – IR learn blade up



Barcode – IR learn blade down

Suggested button setup

 


Program driving Edison


The bottom Edison will control the movement of the EdDozer (forwards, backwards, spin left and spin right). Drive this Edison over the following barcodes. Use buttons that correspond well with the driving manoeuvres on the remote control, but don't use the buttons that you want to control the bucket with.

Reading the barcode


1. Place Edison facing the barcode on the right side
2. Press the record (round) button 3 times
3. Edison will drive forward and scan the barcode
4. Press a button on your TV/DVD remote that you want to activate that function

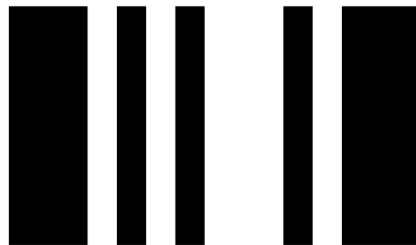


Barcode – IR learn drive forward

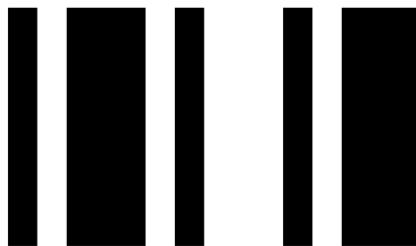 

Barcode – IR learn drive backward

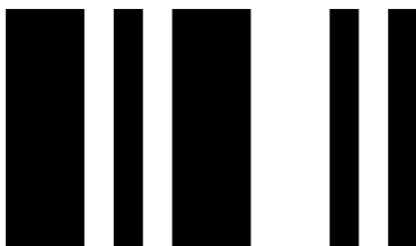 


Barcode – IR learn spin right

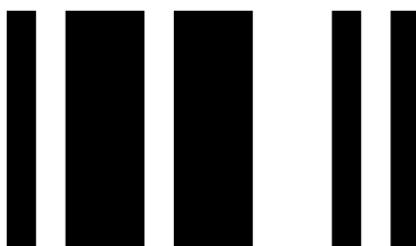 

Barcode – IR learn spin left



 
EdDozer Parts

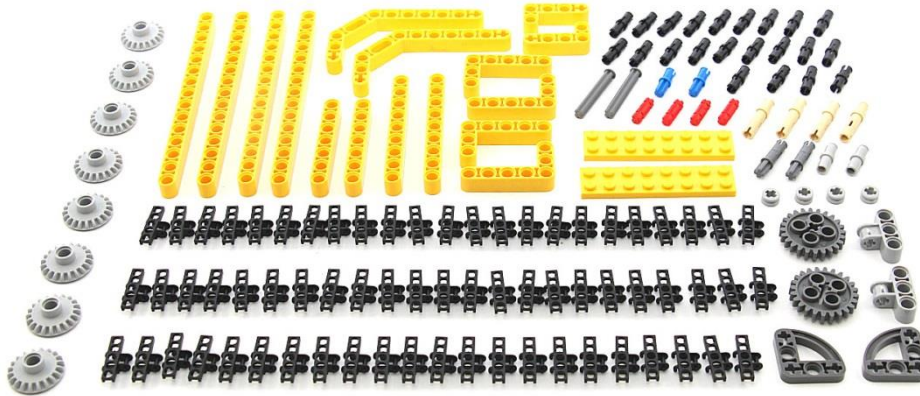

Join 2x68 Tracks pieces



 Into 2x Tracks

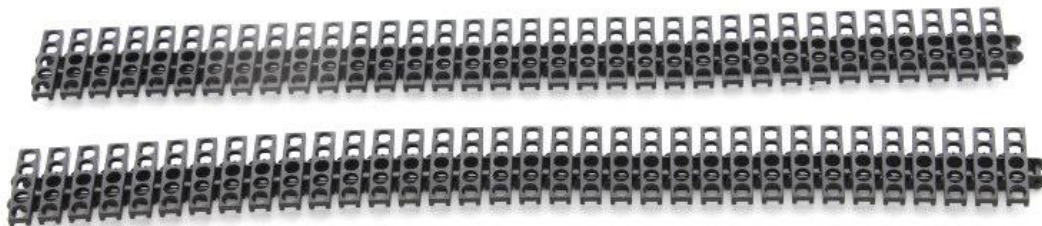

Step 1



Step 2



Step 3



Step 4



Step 5



Step 6



Step 7



Step 8



Step 9



Step 10



Step 11



 
Step 12




Step 13



Step 14

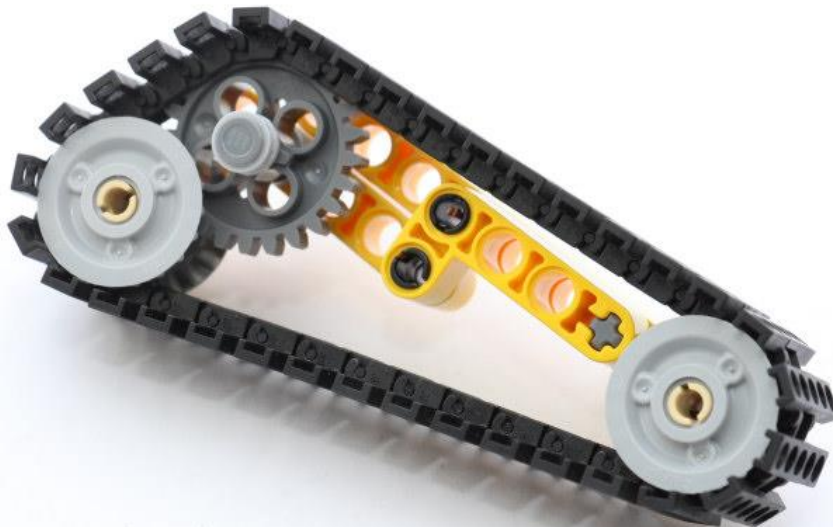

 Step 15

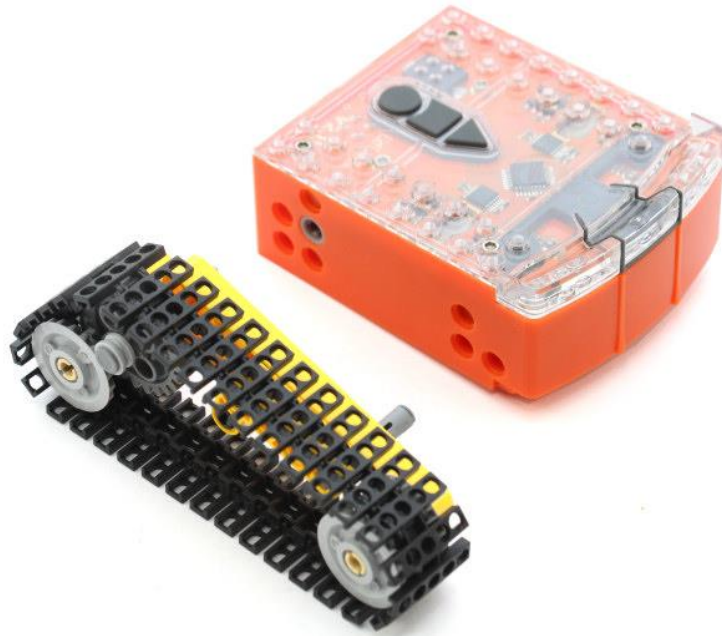

Step 16



Step 17



Step 18



Step 19



Step 20



Step 21



Step 22



Step 23



Step 24



Step 25



Step 26



Step 27



Step 28



 
Step 29




Step 30




Step 31

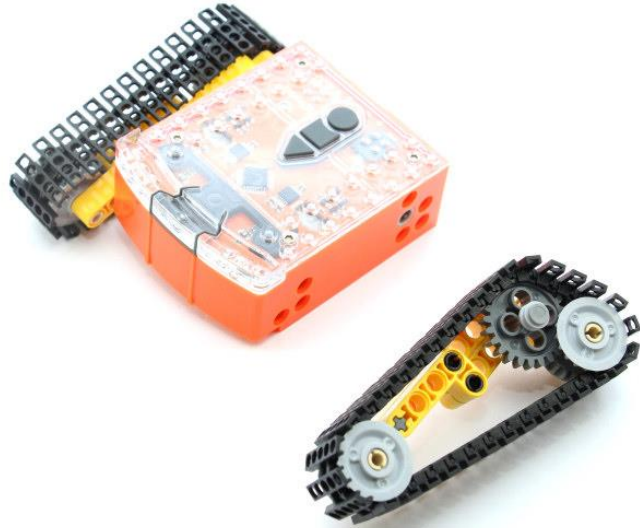

 
Step 32

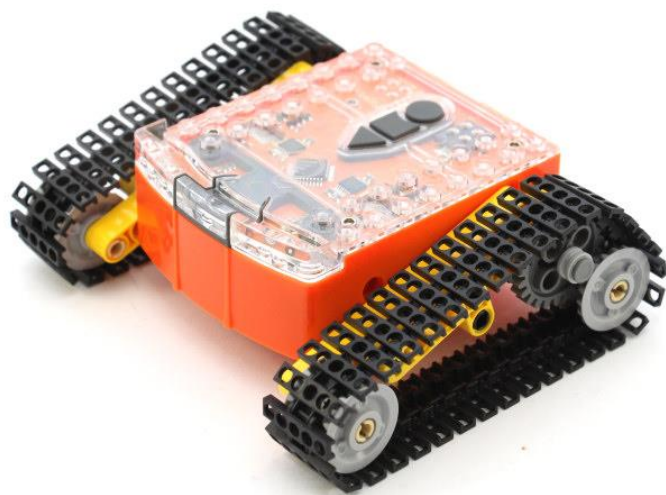

 
Step 33

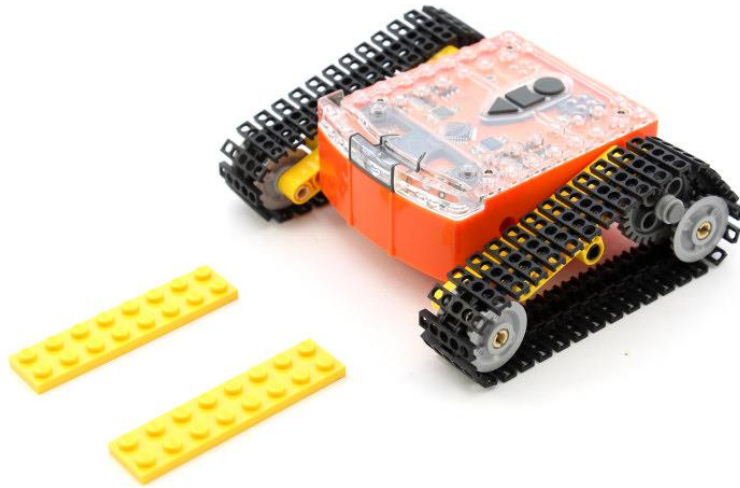

 
Step 34

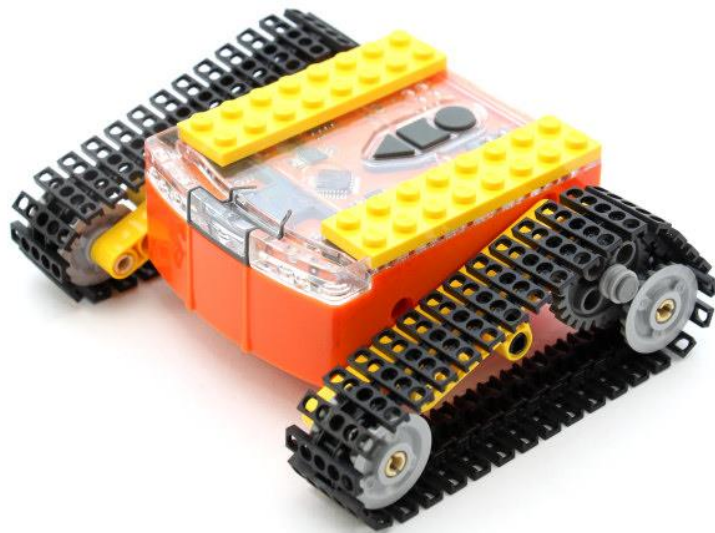

 
Step 35

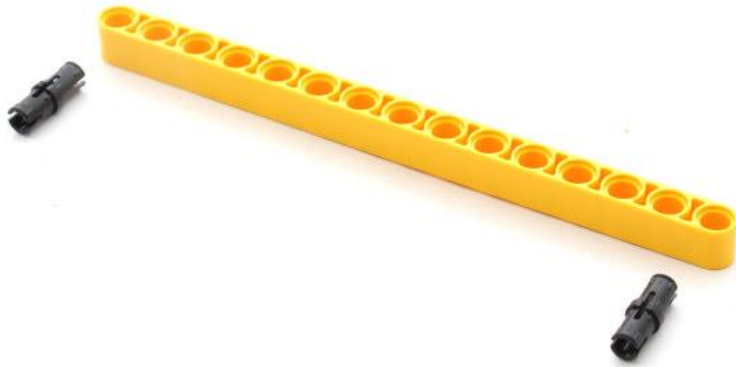

 
Step 36

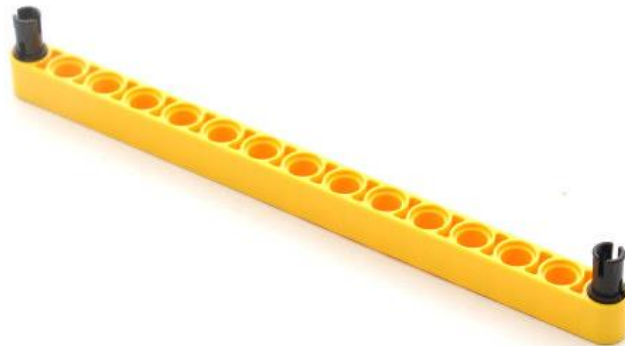

 
Step 37

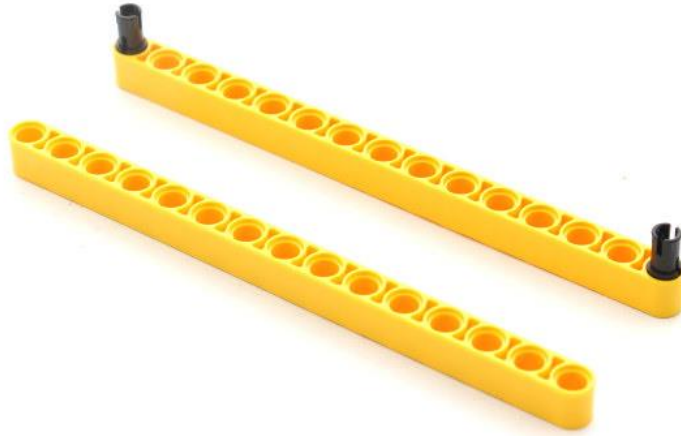

 
Step 38

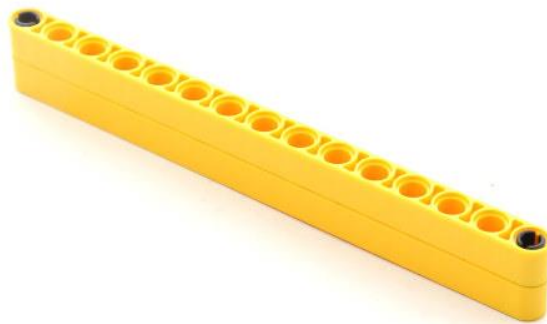

 Step 39

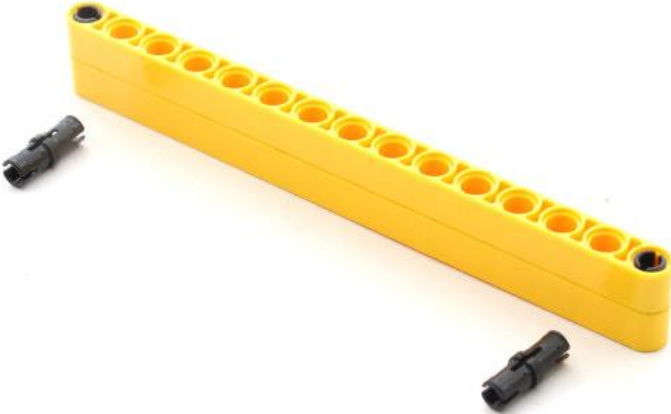

 
Step 40

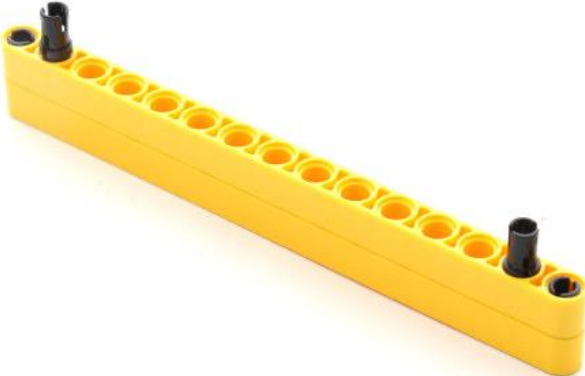

Step 41



 Step 42

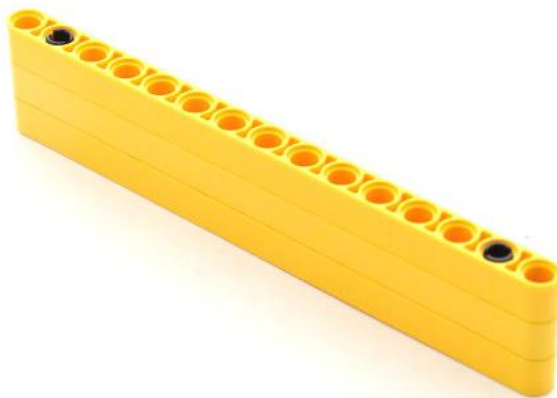

Step 43



Step 44



Step 45



Step 46



Step 47



Step 48



Step 49



Step 50



Step 51



 
Step 52



Step 53



Step 54

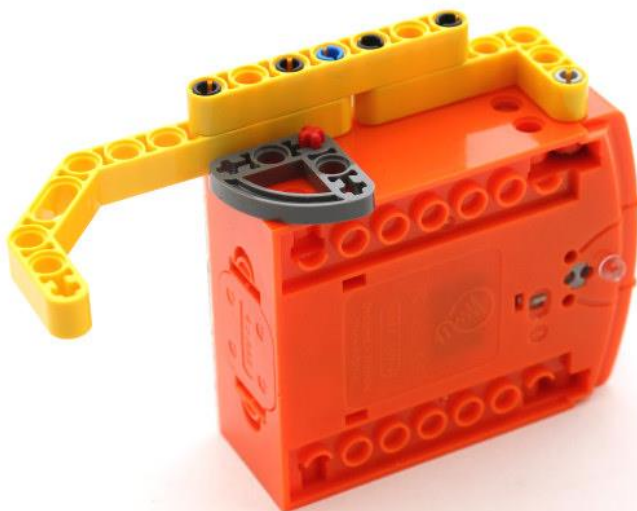

Step 55



Step 56



Step 57



Step 58



Step 58



Step 60



 
Step 61



Step 62




Step 63

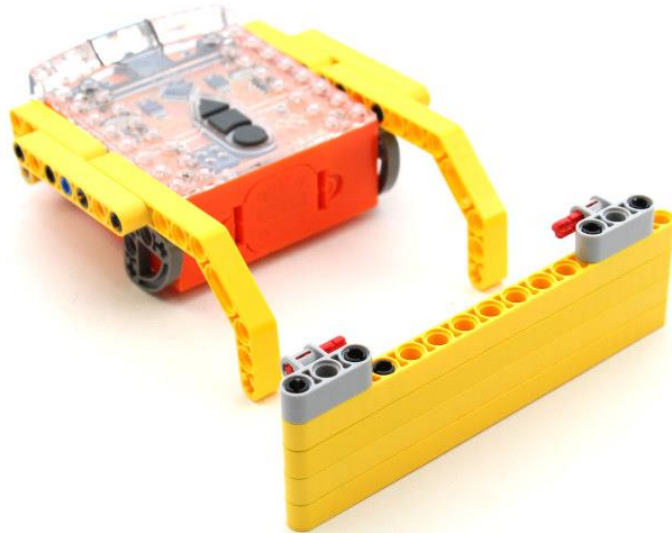

Step 64



 Step 65

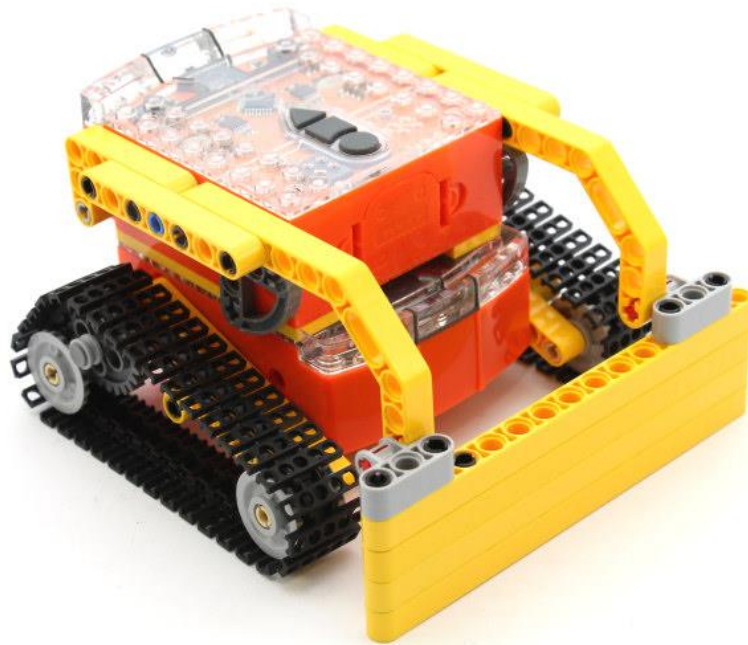

Program the remote control codes

Print the next two pages so you can drive the two Edison robots over the barcodes.

To make this process easier mark one Edison with the black sloping roof tile piece as shown. This Edison will be used as the bucket controller.

 
Program bucket controller Edison

Drive the marked Edison over the following barcodes. Use buttons that correspond well with bucket up and bucket down on the remote control, but don't use the buttons that you want to drive the EdDigger with. See suggested button arrangement below, although your remote control will likely be different.


EdEnginerring – Pack I

Reading the barcode


1. Place Edison facing the barcode on the right side
2. Press the record (round) button 3 times
3. Edison will drive forward and scan the barcode
4. Press a button on your TV/DVD remote that you want to activate that function

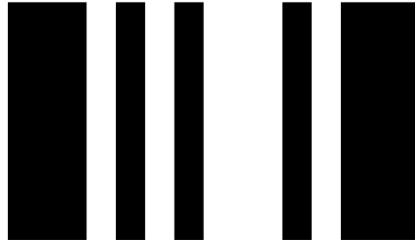

Barcode – IR learn bucket up

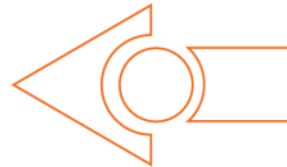 

Barcode – IR learn bucket down

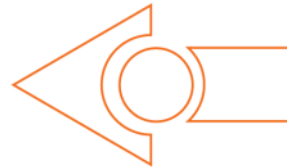 

Suggested button setup

 


Program driving Edison


The driving Edison will control the movement of the EdDigger (forwards, backwards, spin left and spin right). Drive this Edison over the following barcodes. Use buttons that correspond well with the driving manoeuvres on the remote control, but don't use the buttons that you want to control the bucket with.

Reading the barcode


1. Place Edison facing the barcode on the right side
2. Press the record (round) button 3 times
3. Edison will drive forward and scan the barcode
4. Press a button on your TV/DVD remote that you want to activate that function

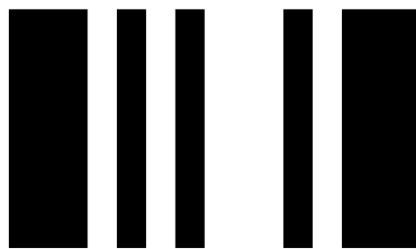

Barcode – IR learn drive forward

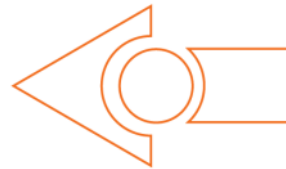 

Barcode – IR learn drive backward

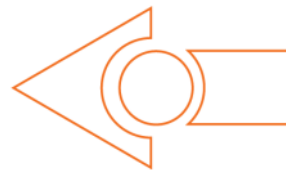 

Barcode – IR learn spin right



Barcode – IR learn spin left

